



_MIDI Channel

Project track output MIDI Channel

Track button + Browsing Encoder

_Recall Saved State

Reload Pattern saved state
Reload Project saved state

Shift + Save
Project + Shift + Press encoder

_Global offset

Offset pattern steps Pitch
Offset pattern steps Gate
Offset pattern steps Velocity
Offset pattern steps Time shift
Offset pattern steps Randomness

Shift + Pitch encoder
Shift + Gate encoder
Shift + Velocity encoder
Shift + Time Shift encoder
Shift + Randomness encoder

_Step Edit

Erase Notes
Copy Notes
Paste Notes

Erase + Press active notes keys
Copy + Press active notes keys
Paste + Press a key

_Quick Edit

Edit Step Pitch
Edit Step Gate
Edit Step Velocity
Edit Step Time Shift
Edit Step Randomness

Hold Step + Turn Pitch knob
Hold Step + Turn Gate knob
Hold Step + Turn Velocity knob
Hold Step + Turn Time Shift knob
Hold Step + Turn Randomness knob

_Note Edit

Edit Note Pitch
Edit Note Gate
Edit Note Gate [Tie/Rest]
Edit Note Velocity
Edit Note Time Shift
Edit Note Randomness

Hold note + Turn Pitch knob
Hold note + Turn Gate knob
Hold note + Press Tie/Rest button
Hold Note + Turn Velocity knob
Hold Note + Turn Time Shift knob
Hold Note + Turn Randomness knob

_Transpose

Add/Remove a track from the Transpose Group
Defines the transposition value
Resets all transpositions

Trans + Track button

Trans + Key
Shift + Trans

_Solo / Mute

Solo Track
Unmute All drums
Drum mute latch mode

Shift + Mute
Shift + Drum
Mute + Drum

_Drum

Select a track part silently

Hold Track 1 + Press drum key

_Chain

Create a pattern chain
Display chained patterns

Hold Chain + press Steps
Hold Chain

_Looper

Enable/Disable Looper
Change the loop's starting point

Shift + Looper
Looper + Step

_Project

Save Project
Copy Project
Paste Project
Erase Project

Save + Project
Copy + Project
Paste + Project
Erase + Project

_Scenes

Save Scene
Copy Scene
Paste Scene
Erase Scene

Save + Scene
Copy + Scene
Paste + Scene
Erase + Scene

_Patterns

Save Track Patterns
Save Pattern
Copy Pattern
Paste Pattern
Erase Pattern

Save + Track
Save + Pattern
Copy + Pattern
Paste + Pattern
Erase + Pattern

_Pages [16-32-48-64]

Copy Page
Paste Page
Delete Page

Copy + Page
Paste + Page
Delete + Page

_Control Mode

Set CC value on a step [Step Edit]
Delete CC from a step [Step edit]
Set CC value on a step [Quick Edit]
Delete CC from a step [Quick edit]

Select step + Turn encoder
Erase + Encoder
Hold Step + Turn encoder
Hold Step + Erase + Encoder

_Split Mode

Enable/Disable Split

Hold a Track button + another Track button [no drums]

_Metronome

Change metronome Time Div [1/4, 1/8, 1/16, 1/32, Triplet]

Hold Metronome + Time Div

_Reset factory

Reset Factory Shortcut

Hold Octave buttons + Power up

_Transport

All notes OFF

Tap 3 x Stop